BANDAI

Tamagotchi Angel™

INSTRUCTIONS

Angel Power!

Ages 8 and up.

Congratulations!

You are now the proud guardian of a Tamagotchi Angel! As a Tamagotchi Angel guardian, you have a very important task: to raise your Tamagotchi Angel well. What kind of spirit will your Tamagotchi Angel be when it goes home to cyberspace? It's up to you to raise your Tamagotchi Angel with just the right measure of love and attention. If you're successful, your Tamagotchi Angel will fly home to get its wings. If not, well. . . you can always try again!

PREPARATION

1) Awaken your Tamagotchi Angel from its resting place by pulling the Halo Tab from the side of the casing.

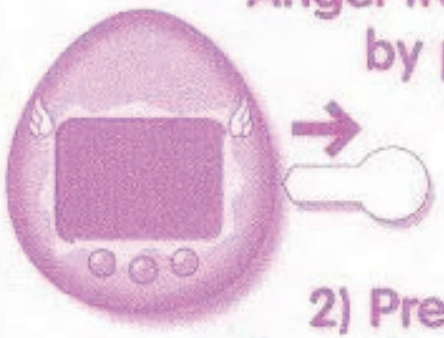

2) Press the recessed Reset Button on the back of the casing by using a pointed object, like a ballpoint pen or a bent paper clip.

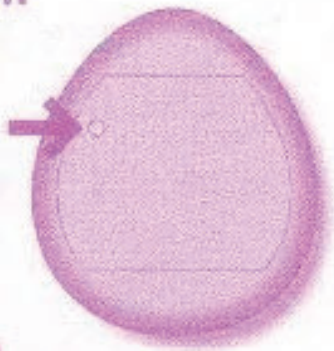

NOTE: Do not apply too much pressure on the Reset Button.

Now you've signaled your Tamagotchi Angel to Earth!

SETTING THE TIMER

Tamagotchi Angel's timer needs to be adjusted to Earth time.

1) Press Button "B." The Timer Screen will appear.

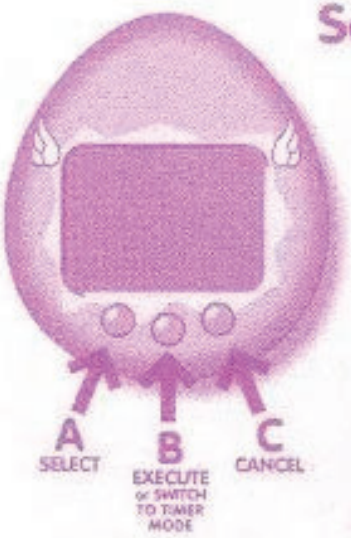

2) Press Button "A" to set the hour; press Button "B" to set the minutes.

NOTE: Press each respective Button repeatedly to advance the time to the desired hour and minute.

3) Press Button "C" to lock in and set the time.

4) Press Button "B" to return to the Main Screen.

Ding, Ding! Success!

It will take about 5 minutes for your Tamagotchi Angel to descend from its flying craft. Then your Tamagotchi Angel will join you on Earth! The spirit is with you!

NOTE: During this period, you will only be able to access the Timer and Reset Button functions.

REMEMBER: Your Tamagotchi Angel will not come to Earth if you do not set the Timer.

When your Tamagotchi Angel arrives, it beeps to make sure you're paying attention.

PRAISE
Sometimes Tamagotchi Angel beeps at you just for attention, be sure to praise it. The attention icon will appear.
1) Press Button "A" repeatedly until you have highlighted the Praise icon.
2) Press Button "B" to let Tamagotchi Angel know that you appreciate its good deed.

MEDICINE:
1) Press Button "A" repeatedly until you have highlighted the Medicine icon.
2) Press Button "B" to administer the medicine.
3) If Tamagotchi Angel is still sick after the first dose of medicine, press Button "B" again to administer another dose.

NOTE: Tamagotchi Angel won't like the medicine very much, but it's the only way to make it feel better.

LIGHTS
1) Press Button "A" repeatedly until you have highlighted the Light icon.
2) Press Button "B" to access the Light On/Light Off screen.
3) Press Button "A" to toggle between Light On and Light Off.
4) Press Button "B" to apply the selected Light setting.
5) Press Button "C" to return to the Main Screen.

NOTE: Remember to always turn off the light when Tamagotchi Angel goes to bed at night or is napping. This ensures a peaceful sleep, which makes Tamagotchi Angel very happy in the morning!

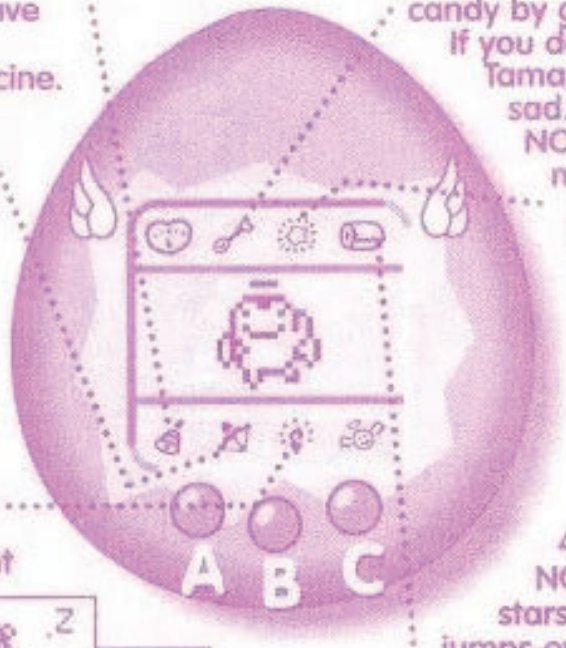

FEEDING TIME:
1) Press Button "A" repeatedly until you have highlighted the Feeding icon.
2) Press Button "B" to see the choice of Pie and Candy.
3) Press Button "A" to toggle between the choices of Pie and Candy.
4) Press Button "B" to feed your Tamagotchi Angel. Yum! WATCH OUT! Beware of the bat that descends to steal Tamagotchi Angel's candy. It's up to you to protect the candy by gently tapping on the screen to scare it away. If you don't scare the bat away, it will steal Tamagotchi Angel's candy and make your angel sad.

NOTE: Don't give your Tamagotchi Angel too much candy or it could get sick.

PLAY TIME:
1) Press Button "A" repeatedly until you have highlighted the Play Time icon.
2) Press Button "B" to start the "Shooting Star Game."
3) Press Button "A" to make Tamagotchi Angel fly over the Shooting Star.
4) Press Button "C" to end the game.

NOTE: If Tamagotchi Angel jumps over all 5 stars, it gets 2 points on its Happiness Meter. If it jumps over 3 stars, it wins 1 point.

FLUSH
1) Press Button "A" repeatedly until you have highlighted the Flush icon.
2) Press Button "B" to clean-up Tamagotchi Angel's angelic mess.

HEALTH

1) Press Button "A" to highlight the Health Icon.
2) Press Button "B" to check Age & Angel Power, Good Deed Meter, Hunger Factor and Happiness Meter.

• Age & Angel Power: Reveals Tamagotchi Angel's relative age (One day of our time is one year to Tamagotchi Angel) and Angel Power.

Feed Tamagotchi Angel pie and candy to increase its power. Be careful not to feed

Tamagotchi Angel too much, though. There's nothing sadder than a sick Tamagotchi Angel.

• Good Deed Meter: Remember to let Tamagotchi Angel know you appreciate it's good deeds. A filled Meter means you're a good care taker. An empty Meter means you need to pay more attention to your Tamagotchi Angel.

• Hunger Factor: Hearts that are not darkened (Empty Hearts) mean Tamagotchi Angel wants to eat more pie and candy. If all

the hearts are full, Tamagotchi Angel will shake its head to tell you "No more!"

- Happiness Factor: Empty hearts mean Tamagotchi Angel wants to play and win more games. Filled hearts means its content.

STROLL

Occasionally, your Tamagotchi Angel will need to take a stroll and it will disappear from your screen. But don't be alarmed, by selecting the "B" button when the Praise icon is lit and then gently tapping your screen, your Tamagotchi Angel will reappear!

GROWTH CHART

- INFANT ANGEL
- BABY ANGEL
- KIDDIE ANGEL
- GROWN-UP ANGEL

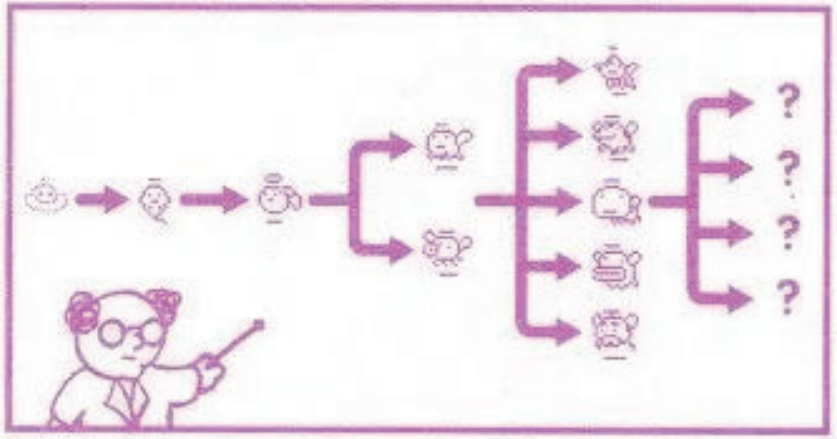

Which one will you get...maybe the hidden character?

TAMAGOTCHI ANGEL & THE CELESTIAL VIRTUAL HOME

When Tamagotchi Angel completes its work on Earth, it will return to its Celestial Virtual Home. When your Tamagotchi Angel completes its journey, a new Tamagotchi Angel can be called. If you'd like to raise another Tamagotchi Angel, simply follow this sequence:

- Press the "A" and "C" buttons simultaneously or
- Press the recessed Reset Button on the back of the casing by using a pointed object, like a ballpoint pen or a bent paper clip.

NOTE: Do not apply too much pressure on the Reset Button.

• Reset the Timer, as described in the Setting the Timer instruction area.

Now you are ready to raise your next Tamagotchi Angel!

• A new Tamagotchi Angel will descend to Earth in about 5 minutes!

TIMER

From the Main Screen, press Button "B" to display the time. The time will scroll onto the

screen. Press Button "B" again to return to the Main Screen.

To reset the time:

1) Press Button "B" to display the time.
2) Press Buttons "A" and "C" at the same time. The word "SET" will appear on the screen.
3) Follow the Setting the Timer instructions to reset the time.
4) Press Button "C" to return to standard time mode.
5) Press Button "B" to return to the Main Screen.

SOUND

Press Buttons "A" and "C" at the same time to turn Tamagotchi Angel sounds off. Press the same buttons again to turn the sounds on.

RESET OPTION

You can reset Tamagotchi Angel under the following circumstances:

- When starting for the first time.
- When you have changed batteries.
- When Tamagotchi Angel doesn't function properly.
- When you want to re-start and raise a new Tamagotchi Angel.

REMEMBER: Don't push the Reset Button too hard!

BATTERIES

Replace the batteries if the screen becomes dim or weak.

1) Loosen and remove the two battery cover screws.
2) Remove the battery cover and the batteries.
3) Insert 2 new LR44 batteries. Make sure to match the positive (+) and negative (-) signs properly.

NOTE: Be sure to use both new batteries, do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Dispose of used batteries properly.

4) Replace the battery cover and tighten the screws into place.

5) Press the reset button on the back. Then set the Timer and a new Tamagotchi Angel will hatch in about 5 minutes!

PAUSE

When you need to be away from your Tamagotchi Angel for an extended period of time, it is possible to suspend the angel-life cycle.

1) Press Button "B" to bring up the Timer.

2) Press Buttons "A" and "C" at the same time. The word "Set" will appear. When Tamagotchi Angel is on the "Set" function, the life cycle is paused.

3) Reset the Timer to the correct time to resume play.

4) Press Button "C" to return to the normal life cycle.

CAUTION: Battery may be harmful if swallowed.

TM & © 1997 Bandai Co., Ltd.

Visit Tamagotchi Angel, Tamagotchi and DigiMon on the World Wide Web at:
http://www.bandai.com or
http://www.toynetwork.com